

Elmo Document Camera

Additional Applications and Teaching Strategies

Camera: Taking images

To eliminate having to adjust pages every time while standing in front of your class, the Elmo Document Camera will capture images that the Elmo is projecting.

Steps:

1. Place resource on tablet.
2. Hold down camera button until you see a camera image pops up on screen.

Note: an SD Card is required.

SD Card: Viewing images

To view images captured on the SD Card, hold down the SD button found on the main control panel. Use the right and left buttons found on both sides of the Menu button to navigate between pictures. Once you are done viewing your images and you want to return to the Elmo camera, hold down the camera button.

PC: Projecting your computer screen

To flip back and forth between Elmo and your computer, hold down the PC button. To return to Elmo camera, hold down camera button.

Menu:

The menu button allows you to navigate to the various applications. The menu button also acts as your “enter” or “select” key. In the menu you will find a number of options. These include: focus, brightness, mode, pause, image rotation, microscope, white balance, posi/nega, colour/b+w, USB mode, preset, call, guide, language.

Use the up and down arrows between the Menu button to view all options. Use the buttons left and right to view choices within an option and to return.

Teaching Strategies

- Gradual Release of Responsibility: one of the Elmo’s strengths is the ability to present student work after the teacher model has been presented. Students can immediately view another person’s work to compare, identify a strength, and how to make improvements.
- For a wide range of activities visit: (This site is also listed on the HPEDSB site.)

<http://www.elmoussa.com/files/ShowMeGreatLessons!.pdf>