

Elmo Document Camera

Quick Reference of Control Panel and Basic Operation

Power Button:

Menu Button:

The menu button allows you to navigate to the various applications.

Note: Use the up and down arrows between the Menu button to view all options. Use the buttons left and right to view choices within an option and to return.


Camera button:

Using the camera button (when there is an SD card inserted), the Elmo will take a picture of the image projected.

PC Button: Use the PC Button to switch from Elmo to PC.

SD Card Button: The SD button will allow you to view the images that were captured with the Elmo camera option.

Elmo Button: will activate the Elmo's lamp.

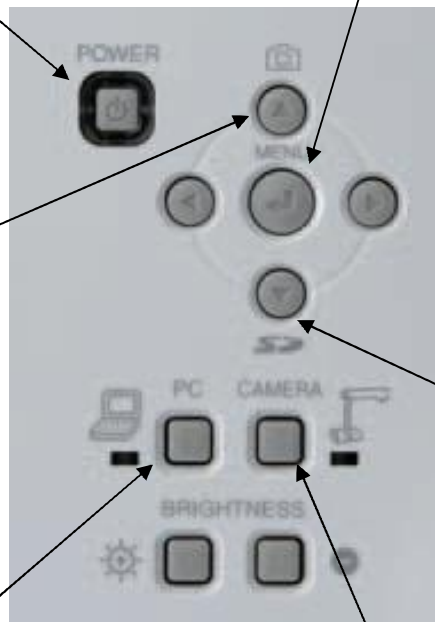

Basic Operation: To Start Up and View Resource

1. Hold Power Button of Elmo down until button turns green.
2. Hold down Power Button of Digital Projector until button turns green.
3. Place resource on white tablet.
4. Turn focusing tool on neck until focused. Push in red button on end of neck to Auto-Focus(AF).